

# Pinpoint<sup>GPS</sup> QUICK REFERENCE GUIDE

TAKE ME FISHING WITH YOU (I'LL COME IN HANDY).

\*Check Owners Manual for instructions on required calibrations and settings.

 **INCREASE SPEED/JOG FORWARD**  
from an Anchor position

 **HEADING LOCK**

 **STEER LEFT/JOG LEFT**  
from an Anchor position

 **ANCHOR**

**1-8** **MEMORY BANK**

 **ROUTE RECORD**



 **DECREASE SPEED/JOG BACKWARDS**  
from an Anchor position

 **PROP ON/OFF**

 **CRUISE CONTROL**  
Activates at 1.0 mph

 **STEER RIGHT/JOG RIGHT**  
from an Anchor position

 **MANUAL MODE**  
Exits any mode

 **ROUTE PLAYBACK**

**Sync Remote to Motor:** Press and hold (◀) & (▶) within 10 seconds of applying power. Beep will indicate sync.

## MANUAL MODE OPERATION

After it is powered up, the trolling motor will operate in Manual Mode by default or if the GPS signal is lost while operating in a GPS mode. To change from any function to the Manual Mode, press the Manual Mode button (M).

### SPEED CONTROL

- To start the propeller, press the Propeller (A) button
- To stop the propeller, press the Propeller (A) button
- To increase motor speed by one level, press the Increase Speed (+) button
- To decrease speed by one level, press the Decrease Speed (-) button

*Holding the Increase Speed or Decrease Speed button will cause the speed level to increase to the maximum speed level or decrease to the minimum speed level.*

### STEERING

- To turn left, press the Steer Left (◀) button
- To turn right, press the Steer Right (▶) button

*The available steering range allows the trolling motor to turn beyond 180° for operation in reverse.*

### MANUAL MODE CODES

Hold Manual Mode (M) button then enter the codes:

M Code	Use
111	.....Compass Calibration (refer to Owners Manual)
112	.....Alignment Calibration (refer to Owners Manual)
131	.....Audio Mode 1
132	.....Audio Mode 2
133	.....Audio Mode 3
211	.....Heading Lock – Course Mode
212	.....Heading Lock – Compass Mode
231	.....Pedal Feel – Lightest Setting*
232	.....Pedal Feel – Medium Light Setting*
233	.....Pedal Feel – Medium Setting*
234	.....Pedal Feel – Medium Heavy Setting*
235	.....Pedal Feel – Heaviest Setting*

\*Tour Pro only

## GPS MODE OPERATION

Status LED is solid when the motor has GPS fix.  
Status LED blinks slowly when a GPS mode is active.

### SETTING THE ANCHOR POSITION

- Press the Anchor (⚓) button to lock current GPS position

### ADJUSTING THE ANCHOR POSITION (JOG)

While in Anchor, the Anchor position can be adjusted in five foot increments (Jog), relative to boat orientation, in the direction selected:

- Press the Left arrow (◀), Right arrow (▶), Forward (+) or Backward (-) button

### STORING AN ANCHOR POSITION

- Press and hold any of the numbered Memory (1-8) buttons for two seconds

*A stored Anchor position can be overwritten with a new Anchor position by repeating the same procedure.*

### RECALLING A STORED ANCHOR POSITION

- Press and release the desired Memory (1-8) button  
*If the desired stored Anchor position is over a mile away from your current location, the trolling motor will emit an error tone.*

### EXITING ANCHOR POSITION

- Press the Anchor (⚓) button or press the Manual Mode (M) button

### SETTING THE HEADING LOCK

To lock in the trolling motor's heading and navigate in a straight line:

- Steer the trolling motor in the desired direction
- Press the Heading Lock (🚫) button

### ADJUSTING HEADING LOCK

- To adjust the Heading, use the Steer Left (◀) button and Steer Right (▶) button
- To adjust the speed, use the Increase Speed (+) button and Decrease Speed (-) button

### EXITING HEADING LOCK

- Press the Heading Lock (🚫) or Manual Mode (M) buttons

## RECORDING AND STORING A ROUTE

- Press the Route Record (📍) button and begin navigating along your desired Route

*You can use Heading Lock and Manual mode at any time while recording a Route. Status LED will blink and unit will beep as waypoints are recorded.*

- Press and hold any of the numbered Memory (1-8) buttons to stop recording and to store the Route

*The trolling motor will emit a tune to confirm that Route is stored. To overwrite a stored Route, use the same procedure as Storing A New Route.*

### RECALLING A STORED ROUTE

- Press the Route Playback (▶) button
- Press and release the desired numbered Memory (1-8) button

*The trolling motor will return you to the nearest point on the recalled Route then navigate the longest leg of the route.*

### ROUTE TRAVEL AND COMPLETION

*While travelling along a stored route, the direction of travel can be reversed by recalling the stored Route again. Upon reaching the end of a stored Route, the system will enter Anchor mode.*

### SETTING CRUISE CONTROL

- Press the Cruise Control (🚦) button to set the Cruise Control at 1.0 mph

*Cruise Control can be activated while in Heading Lock or Route Playback.*

### ADJUSTING CRUISE CONTROL SPEED

- Cruise Control (🚦) speed can be increased or decreased in 0.1 mph increments by using the Increase Speed (+) button or Decrease Speed (-) button

### EXITING CRUISE CONTROL

- Press the Cruise Control (🚦) button to turn off Cruise Control

